



# PowerGrip™

## Installation Instructions


ROOF MOUNT SYSTEM

### Only technicians trained in single-ply roof installation should install this product.

Always check with roof system manufacturer for installation criteria and written acceptance of the intended application prior to installation. Failure to do so could void the roof warranty.




153 Bowles Road  
Agawam, MA 01001 USA  
800-633-3800 | 413-789-0252  
www.OMGRoofing.com

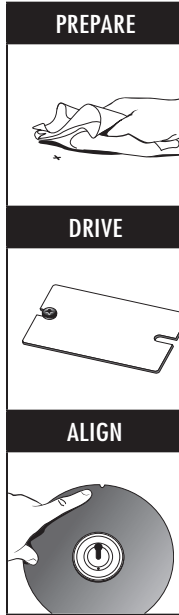

1. Mark location where PowerGrip is to be installed. Prepare membrane surface at each location following roof system manufacturer's requirements.

2. Install recommended fastener through the roof and deck following system manufacturer's specifications using the depth gauge provided, and allowing the fastener head to sit firmly on the gauge card. Do not overdrive.

3. Locate the notch on the perimeter of the PowerGrip flange and note how it aligns with the plate on the underside of the PowerGrip.

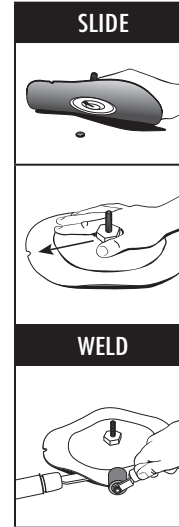

4. Slide the assembly over the head of the fastener to position the PowerGrip in the proper location.

5. Heat weld the flange of the PowerGrip to the manufacturer's specifications and seal cut edges as required.

*Based on technology from EcoFasten Solar.  
U.S. Patent No. 8,683,751.*

BUR/Mod Bit: See back for instructions.



**PowerGrip™**  
ROOF MOUNT SYSTEM

# BUR/Mod-Bit Installation Instructions

---

- 1. Purchase Kemperol Flashpack 2K-PUR with R Primer (for larger jobs, materials may be purchased separately in bulk, but beware of pot life consequences)**
- 2. Prepare OMG PV Mount by roughing up TPO membrane flange with 60 grit sandpaper to knock-off factory finish**
- 3. Secure/Bolt/Screw OMG PV Mount to Existing Mod Bit Cap Sheet**
- 4. Adhere TPO membrane flange with TPO Bonding Adhesive – let cure – flash off may cause blistering later**
- 5. Mask target patch area (approx. 18"x18" square) with 3" masking tape or duct tape for neat appearance**
- 6. Pre-cut fleece for area. Neatly cut a small hole (approx. 2" diameter) in the center and stretch fleece over threaded mount exposing metal center**
- 7. Mix and Apply Kempertec R-Primer on Metal, TPO, and granular roof surface – let cure – approx. 3 hours. Primer must be 100% dry to the touch. No strings. No tack.**
- 8. Mix and Apply Kemperol 2K-PUR resin membrane system thoroughly saturating fleece and carrying liquid membrane a minimum of ¼" beyond any fleece. The system will be fully-reinforced and will have no unsupported membrane. Let cure – approx. 6 hours.**
- 9. Optional – No included in the Flashpack – Kemper System offers coatings in a wide variety of colors to match or provide other contrast including 6 CRRC rated finishes. These can be applied within 48 hours of application of the 2K-PUR system without any additional surface preparation. Color brochure available on website.**
- 10. Resources – many application videos are available on YouTube. Use the [www.kempersystem.com](http://www.kempersystem.com) website for General Application Guidelines, Product Data Sheets and SDS.**